

iPad Counter

Assembly Instructions



Inserting iPad into enclosure

1



Carefully remove iPad components from carton.

2



Insert key provided into lock, rotate clockwise through 90° to unlock, and remove lock from enclosure.

3



Slide and remove upper enclosure cover.

4



If using the iPad 2 or iPad 3 please insert the iPad into the silicon protective sleeve provided, to minimise movement within the enclosure.



Carefully place iPad into enclosure back section, ensuring that the home button is adjacent to the lock aperture.


5



Slide cover back into position and secure with lock.

Assembling collar mount to iPad holder

1

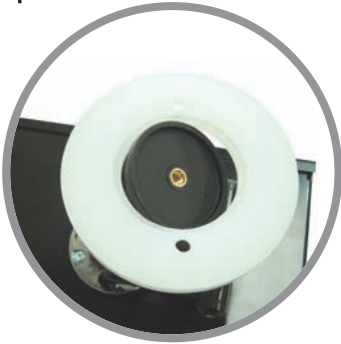

Place acrylic collar over the bottom of the iPad holder arm. Ensure that the larger diameter aperture is adjacent to the threaded insert (as shown).

2



Remove disc from packaging, align the arrows on the disc and arm, and press together.

3



Secure assembly, using the allen key and black screw provided.


iPad Counter Display

1



Select desired position for iPad display on counter top, ensuring that the assembly will not interfere with the counter framework or fixings. Mark out two holes onto counter top, in alignment with screw holes of iPad collar mount. Carefully drill clearance holes through counter top large enough to accommodate for M6 screw threads and then place aluminium plate over drilled holes.

2

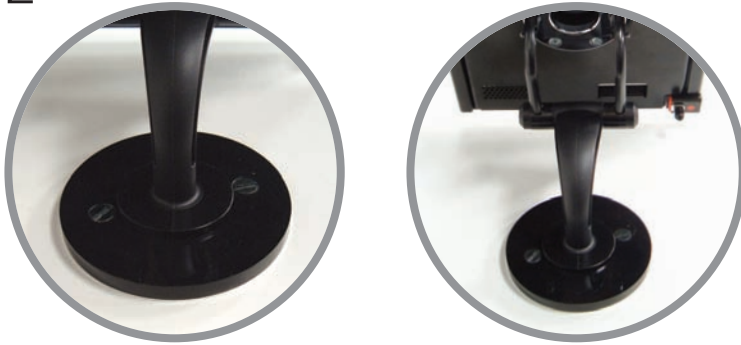

Align holes of collar mount to drilled holes and aluminium plate and insert 2 off fixing screws.

3



Position washers over protruding screw threads on the underside of the counter top and secure assembly with locking nuts.

